Simple, quick and economical installation

- Mark out location of bathroom and establish final floor level.
- Place a thin layer of sand or blinding onto floor area.
- Place unit on the sand/wet blinding and make sure that the unit is level and uniformly supported.
- Connect outlet pipes and water supply.

SPECIFICATIONS

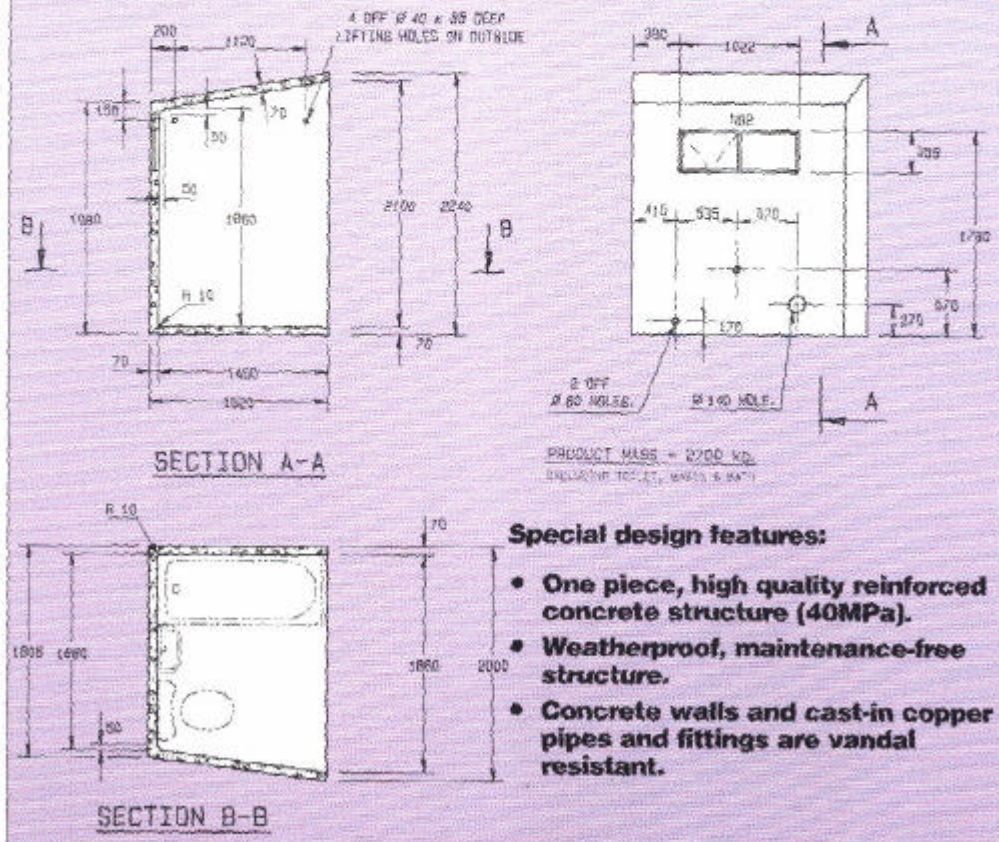

Special design features:

- One piece, high quality reinforced concrete structure (40MPa).
- Weatherproof, maintenance-free structure.
- Concrete walls and cast-in copper pipes and fittings are vandal resistant.